



TECNO-RACING

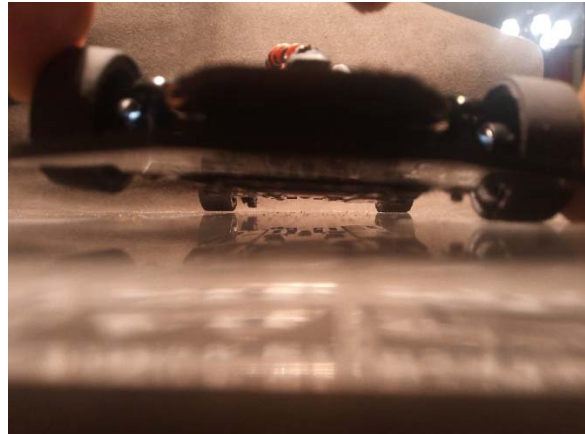


Brick Pod *(available for MR-03 98 mm and PNR 2.5 W 98 mm/102 MM)*

Brick-Pod helps you instantly to recover the correct balance and the correct roll of the car. At the end of a session, you will notice that your chassis, as a result of tire wear, or as a result of blows and subsequent misalignments between the frame and the rear pod, will lose the balance you have sweated so much!

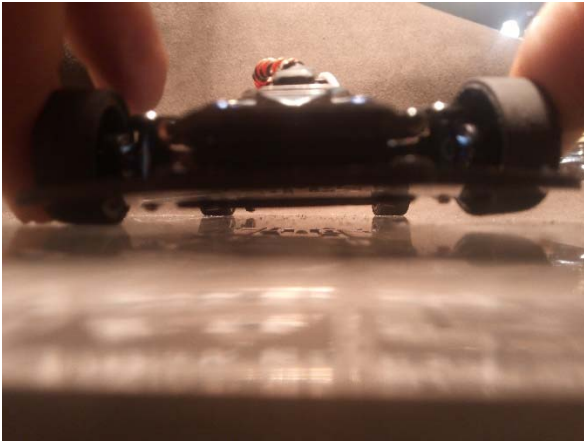


Here is the Brick Pod: just slightly unscrew (it is not necessary to remove them) the screws of the T-Plate (pod side), check that the dock has "play", put the Brick Pod in place

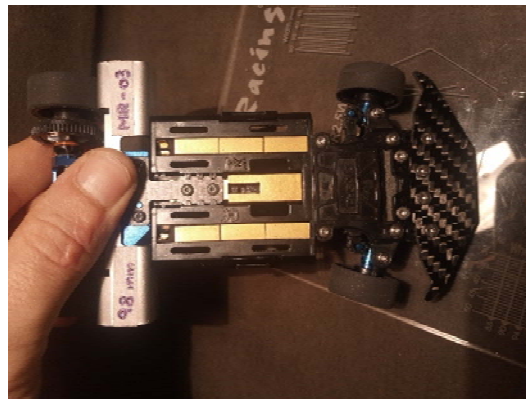

Check that chassis and pod rest correctly on the Brick-Pod



Finally screw the T-Plate (keeping the Brick Pod in place).

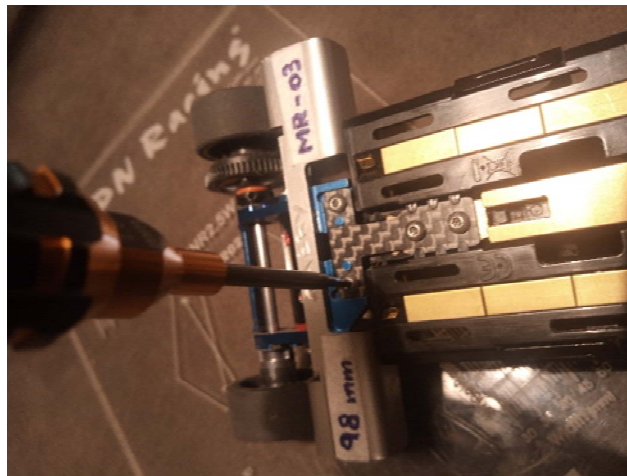

Tighten the T-Plate screws correctly, it is possible to remove the Brick Pod, and you can verify that you have found the starting setup in an instant.

Brick Pod is available for MR-03 98 mm (Mod TR-0398), for PNR 2.5 W 98 mm (Mod TR-2598) and for PNR 2.5 W 102 mm (Mod TR-25102). Each chassis needs its own Brick Pod model.

Note: it is essential start from a correct setup of the chassis, for suggestions in the setup and information on use you can contact us at following e-mail.

info@tecno-racing.com

www.tecno-racing.com