#600500


Mini-Z Concept C9 ABS Car Body Kit







designated cutting line. Then, drill a small hole in each of the three mounting tabs.


Use window mask to paint the Lexan roof, best result by Tamiya PS paint.

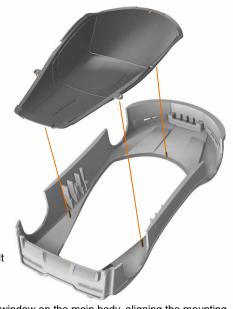

Position the Lexan window on the main body, aligning the mounting tabs with the guide pins. Secure the Lexan window to the body by melting the guide pins with a soldering iron or put CA glue.

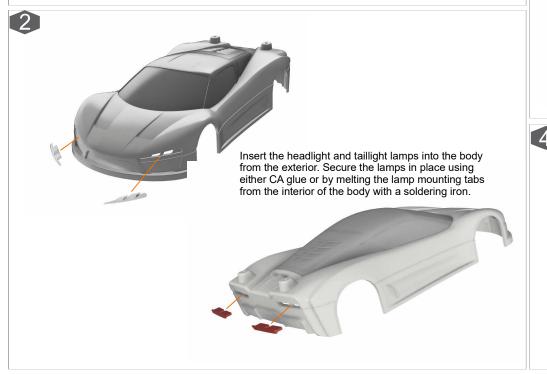

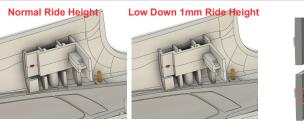





N = Short

W = Standard (Dot Marking)

1. Flip Left and Right Body clip to change the ride height

2. If needs add the shims between body and clip, you can low down too.

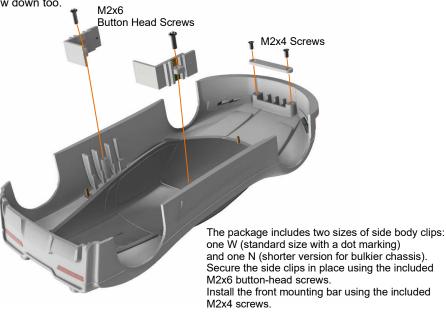

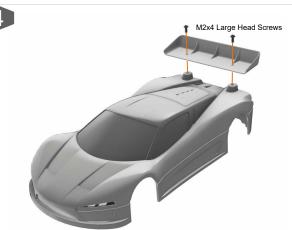

Spare Parts:

#600521W Mounting Parts W #600521N Mounting Parts N #600531 Clear Lens Set #600532 Red Lens Set #600510 Lexan Roof and Rear Wing

Optional Parts:

#CP650 Carbon Fiber Adapter #600640 Touring Car Lexan Wing